



# Kodak Easyshare P712 Battery Replacement

This guide demonstrates how to replace the rechargeable camera battery.

Written By: Melanie Martin



## INTRODUCTION

This guide demonstrates how to replace the rechargeable camera battery.

---



### PARTS:

- [Kodak Li-ion rechargeable battery](#) (1)
-

www.iFixit.com



- Turn off the camera by turning the selector dial to “off.” This is located on top of the camera body.

- On the bottom of the camera body, you will find the battery door. Slide the switch into the “open” position. Release thumb to allow the door to swing open.

## Step 3 — Remove Battery



- Remove the Kodak Li-ion Rechargeable Battery.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-09-09 09:33:36 PM.